

**TSE 250R**

**FSE 300R**

**FSE 250E**











F04 开关 SWITCH

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F04-01		左闸把总成	L SWITCH	1
	F04-02		熄火开关	CUTOFF SWITCH	1
	F04-03		大灯开关	HEADLIGHT SWITCH	1
	F04-04		电启动开关	STARTING SWITCH	1
					

F05 握把 GRIP COMP

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F05-01		左手把胶	L HANDLEBAR RUBBER	1
	F05-02		右手把胶	R HANDLE RUBBER	1
	F05-03		左手把胶锁扣	R HANDLE RUBBER LOCK	1
	F05-04		加油器拉线铜帽	CLUTCH CABLES HEAD	1
	F05-05		离合手柄	CLUTCH LEVER	1
	F05-06		离合手柄座	CLUTCH LEVER LOWER CASSETTE	1
	F05-07		离合手柄卡子	CLUTCH LEVER UPPER CASSETTE	1
	F05-08		加油器内芯	RUSH PITH, OILER	1
	F05-09		加油器座子	OILER SEAT	1
	F05-10		油门拉线调节螺栓	CLUTCH CABLES BOLT	1
	F05-11		加油器座防尘帽	OILER SEAT SHIELD	1
	F05-12		T30 M6*20	INNER BOLT M6*20	4

















F09 方向柱 STEERING STEM

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F09-01		方向柱下联板	LOWER PLATE, STEERING STEM	1
	F09-02		方向柱上联板	UPPER PLATE, STEERING STEM	1
	F09-03		拖车挂钩	Hook	2
	F09-04		卡子卡座连接胶	MOUNTING GLUE	4
	F09-05		方向轴承下防尘垫	DUSTPROOF GASKET, STEERING STEM	1
	F09-06		方向锥型轴承	STEERING BEARING	2
	F09-07		方向锥型轴承座圈	STEERING BOWL	2
	F09-08		方向轴承上防尘盖	PAD, STEERING STEM ADJUSTING NUT	1
	F09-09		方向柱锁紧螺栓	LOCKED NUT, STEERING STEM	1
	F09-10		手把管卡子	UPPER CASSETTE, HANDLE PIPE	1
	F09-11		手把管卡座	LOWER CASSETTE, HANDLE PIPE	2
	F09-12		手把管卡座边接螺栓	LOWER CASSETTE, HANDLE PIPE BOLT	2
	F09-13		T40圆头M10*35	INNER BOLT M10*35	2
	F09-14		T40 M8*25	INNER BOLT M8*25	4
	F09-15		T40 M8*40	INNER BOLT M8*40	4
	F09-16		T40 M8*50	INNER BOLT M8*50	4
	F09-17		T40 M8*25	INNER BOLT M8*25	1

F10 前减震器 FRONT SHOCK ABSORBER

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F10-01		前右减震	R, FRONT SHOCK ABSORBER	1
	F10-02		前左减震	L, FRONT SHOCK ABSORBER	1
	F10-03		前减护罩右	R SHIELD, FRONT SHOCK ABSORBER	1
	F10-04		前减护罩左	L SHIELD, FRONT SHOCK ABSORBER	1
	F10-05		前减护罩油管卡子	CLIP, FRONT BRAKE OIL PIPE	1
	F10-06		后中心减震	REAR SHOCK ABSORBER	1
	F10-07		T40 M10*55	INNER BOLT M10*55	2
	F10-08		ST六角6*16	SCREW 6*16	2
	F10-09		5787台阶6*10	BOLT 6*10	6
	F10-10		T40 M8*25	INNER BOLT M8*25	4
	20				































F19-2 HJ250H-6 水箱 WATER TANK

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F19-2-01	FSE 300R	左水箱	WATER TANK,L	1
	F19-2-02	FSE 300R	右水箱	WATER TANK,R	1
	F19-2-03	FSE 300R	风扇	ELECTRIC FAN	1
	F19-2-04	FSE 300R	水箱附件	WATER TANK ATTACH	1



**F21-1 HJ250H-5 脚踏操纵件 REAR BRAKE PEDAL**

Revision Number Page:31


	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F21-1-01	TSE 250R	侧支架	SIDE STAND	1
	F21-1-02	TSE 250R	启动杆	START LEVER	1
	F21-1-03	TSE 250R	左脚蹬	L, FRONT FOOTREST	1
	F21-1-04	TSE 250R	右脚蹬	R, FRONT FOOTREST	1
	F21-1-05	TSE 250R	变档杆	GEARSHIFT ARM	1
	F21-1-06	TSE 250R	刹车臂	REAR BRAKE	1
	F21-1-07	TSE 250R	刹车踏板	REAR BRAKE PEDAL	1
	F21-1-08	TSE 250R	刹车臂回位簧	RETURN SPRING, REAR BRAKE PEDAL	1
	F21-1-09	TSE 250R	刹车臂回位支架	REAR BRAKE BRACKET	1
	F21-1-10	TSE 250R	刹车臂轴承	BEARING	2
	F21-1-11	TSE 250R	侧支架回位簧	SIDE STAND SPRING	1
	F21-1-12	TSE 250R	侧支架挂钩	HANGING BOARD, RETURN SPRING	1
	F21-1-13	TSE 250R	H5台阶 M6*16	BOLT H M6*16	1
	F21-1-14	TSE 250R	自锁螺帽M10	NUT M10	1
	F21-1-15	TSE 250R	侧支架螺栓	BOLT	1
	F21-1-16	TSE 250R	T40圆头M8*20	INNER BOLT M8*20	1
	F21-1-17	TSE 250R	侧支架限位衬套	SIDE STAND BUSHING	1
	F21-1-18	TSE 250R	T25不锈钢M5*12	INNER BOLT M5*12 STAINLESS STEEL	2
	F21-1-19	TSE 250R	T30 M6*20	INNER BOLT M6*20	1
	F21-1-20	TSE 250R	6177 M6	NUT M6	1
	F21-1-21	TSE 250R	5783 M8*20	BOLT M8*20	1
	F21-1-22	TSE 250R	T40圆头M10*40	INNER BOLT M10*40	1
	F21-1-23	TSE 250R	6177 M10	NUT M10	1

**F21-2 HJ250H-6 脚踏操纵件 REAR BRAKE PEDAL**

Revision Number Page:32

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F21-2-01	FSE 300R	侧支架	SIDE STAND	1
	F21-2-02	FSE 300R	启动杆	START LEVER	1
	F21-2-03	FSE 300R	左脚蹬	L, FRONT FOOTREST	1
	F21-2-04	FSE 300R	右脚蹬	R, FRONT FOOTREST	1
	F21-2-05	FSE 300R	变档杆	GEARSHIFT ARM	1
	F21-2-06	FSE 300R	刹车臂	REAR BRAKE	1
	F21-2-07	FSE 300R	刹车踏板	REAR BRAKE PEDAL	1
	F21-2-08	FSE 300R	刹车臂回位簧	RETURN SPRING, REAR BRAKE PEDAL	1
	F21-2-09	FSE 300R	刹车臂回位支架	REAR BRAKE BRACKET	1
	F21-2-10	FSE 300R	刹车臂轴承	BEARING	2
	F21-2-11	FSE 300R	侧支架回位簧	SIDE STAND SPRING	1
	F21-2-12	FSE 300R	侧支架挂钩	HANGING BOARD, RETURN SPRING	1
	F21-2-13	FSE 300R	H5台阶 M6*16	BOLT H M6*16	1
	F21-2-14	FSE 300R	自锁螺帽M10	NUT M10	1
	F21-2-15	FSE 300R	侧支架螺栓	BOLT	1
	F21-2-16	FSE 300R	T40圆头M8*20	INNER BOLT M8*20	1
	F21-2-17	FSE 300R	侧支架限位衬套	SIDE STAND BUSHING	1
	F21-2-18	FSE 300R	T25不锈钢M5*12	INNER BOLT M5*12 STAINLESS STEEL	2
	F21-2-19	FSE 300R	T30 M6*20	INNER BOLT M6*20	1
	F21-2-20	FSE 300R	6177 M6	NUT M6	1
	F21-2-21	FSE 300R	5783 M8*20	BOLT M8*20	1
	F21-2-22	FSE 300R	T40圆头M10*40	INNER BOLT M10*40	1
	F21-2-23	FSE 300R	6177 M10	NUT M10	1

F21-3 HJ250H-7 脚踏操纵件 REAR BRAKE PEDAL

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F21-3-01	FSE 250E	侧支架	SIDE STAND	1
	F21-3-02	FSE 250E	启动杆	START LEVER	1
	F21-3-03	FSE 250E	左脚蹬	L, FRONT FOOTREST	1
	F21-3-04	FSE 250E	右脚蹬	R, FRONT FOOTREST	1
	F21-3-05	FSE 250E	变档杆	GEARSHIFT ARM	1
	F21-3-06	FSE 250E	刹车臂	REAR BRAKE	1
	F21-3-07	FSE 250E	刹车踏板	REAR BRAKE PEDAL	1
	F21-3-08	FSE 250E	刹车臂回位簧	RETURN SPRING, REAR BRAKE PEDAL	1
	F21-3-09	FSE 250E	刹车臂回位支架	REAR BRAKE BRACKET	1
	F21-3-10	FSE 250E	刹车臂轴承	BEARING	2
	F21-3-11	FSE 250E	侧支架回位簧	SIDE STAND SPRING	1
	F21-3-12	FSE 250E	侧支架挂钩	HANGING BOARD, RETURN SPRING	1
	F21-3-13	FSE 250E	H5台阶 M6*16	BOLT H M6*16	1
	F21-3-14	FSE 250E	自锁螺帽M10	NUT M10	1
	F21-3-15	FSE 250E	侧支架螺栓	BOLT	1
	F21-3-16	FSE 250E	T40圆头M8*20	INNER BOLT M8*20	1
	F21-3-17	FSE 250E	侧支架限位衬套	SIDE STAND BUSHING	1
	F21-3-18	FSE 250E	T25不锈钢M5*12	INNER BOLT M5*12 STAINLESS STEEL	2
	F21-3-19	FSE 250E	T30 M6*20	INNER BOLT M6*20	1
	F21-3-20	FSE 250E	6177 M6	NUT M6	1
	F21-3-21	FSE 250E	5783 M8*20	BOLT M8*20	1
	F21-3-22	FSE 250E	T40圆头M10*40	INNER BOLT M10*40	1
	F21-3-23	FSE 250E	6177 M10	NUT M10	1

F22 摇架 CRADLE ASSY

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F22-01		摇臂	ROCKER	1
	F22-02		摇架	CRADLE ASSY	1
	F22-03		摇臂轴	ROCKER ARM SHAFT	1
	F22-04		摇臂衬套	CRADLE BUSHING	1
	F22-05		摇架衬套短	CRADLE BUSHING SHORT	1
	F22-06		摇架衬套长	CRADLE BUSHING LONG	2
	F22-07		摇架轴带限位	CRADLE ARM SHAFT LIMIT	1
	F22-08		摇架轴	CRADLE ARM SHAFT	1
	F22-09		6187 M14	NUT M14	3
	F22-10		摇架轴防尘盖小	DOST COVER SMALL	2
	F22-11		摇架轴防尘盖大	DOST COVER BIG	4
	F22-12		摇架油封25*32*7	OIL SEAL 25*32*7	2
	F22-13		摇架油封24*32*7	OIL SEAL 24*32*7	2
	F22-14		摇架油封22*32*7	OIL SEAL 22*32*7	4
	F22-15		滚针轴承HK1816	NEEDLE BEARING HK1816	4
	F22-16		滚针轴承HK2016	NEEDLE BEARING HK2016	2
	F22-17		滚针轴承HK2216	NEEDLE BEARING HK2216	1

F23 平叉 REAR FORK



NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
F23-01		平叉	REAR FORK	1
F23-02		平叉轴	REAR FORK PIVOT	1
F23-03		油管卡胶	TUBING SUPPORT	1
F23-04		链条护卡	CHAIN GUARD	1
F23-05		链条压紧胶	CHAIN TENSIONING	1
F23-06		导链盒	CHAIN GUIDE	1
F23-07		链条	CHAIN	1
F23-08		链条导向轮	CHAIN TENSIONING PULLEY	1
F23-09		衬套	BUSHING	1
F23-10		T30 M6*12	INNER BOLT M6*12	2
F23-11		H6 M6*16	INNER BOLT M6*16	2
F23-12		锥型铁块Φ6	WASHER Φ6	2
F23-13		翻边衬套Φ6*Φ18*10	T BUSHING Φ6*Φ18*10	2
F23-14		T40 M8*50	INNER BOLT M8*50	1
F23-15		链条调节螺丝	ADJUSTER BOLT	2
F23-16		6177 M8	NUT M8	1
F23-17		6177 M8不锈钢	NUT M8 STAINLESS STEEL	2







F26 前轮 FRONT WHEEL

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F26-01		前轮内胎	TUBE, FRONT WHEEL	1
	F26-02		前轮外胎	TYRE, FRONT WHEEL	1
	F26-03		前轮网总成	FRONT WHEEL RIM COMBINATION	1
	F26-04		前轮圈	FRONT WHEEL RIM	1
	F26-05		前轮内辐条	FRONT WHEEL IN SPOKE	18
	F26-06		前轮外辐条	FRONT WHEEL OUTSIDE SPOKE	18
	F26-07		辐条螺帽	NUT, FRONT WHEEL SPOKE	36
	F26-08		前轮毂	FRONT HUB	1
	F26-09		前轮内衬套	FRONT WHEEL IN BUSHING	1
	F26-10		前轮毂轴承	BEARING, FRONT HUB	2
	F26-11		前轮毂油封	OIL SEAL, FRONT HUB	2
	F26-12		前轮左衬套	L BUSHING, FRONT WHEEL	1
	F26-13		前轮右衬套	R BUSHING, FRONT WHEEL	1
	F26-14		前轮轴	FRONT AXLE	1
	F26-15		前轮轴螺帽	FRONT AXLE NUT	1

**F27 后轮 REAR WHEEL**

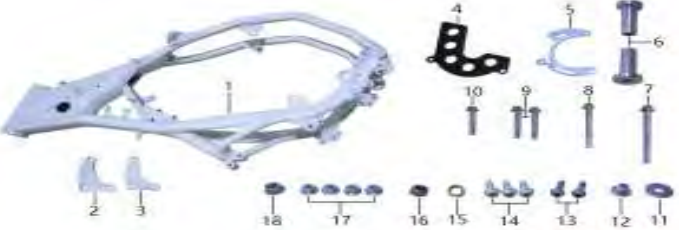
Revision Number Page:39

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F27-01		后轮内胎	TUBE, REAR WHEEL	1
	F27-02		后轮外胎	TYRE, REAR WHEEL	1
	F27-03		后轮网总成	REAR WHEEL RIM COMBINATION	1
	F27-04		后轮圈	REAR WHEEL RIM	1
	F27-05		后轮内辐条	REAR WHEEL IN SPOKE	18
	F27-06		后轮外辐条	REAR WHEEL OUTSIDE SPOKE	18
	F27-07		辐条螺帽	NUT, REAR WHEEL SPOKE	36
	F27-08		后轮毂	REAR HUB	1
	F27-09		后轮内衬套	REAR WHEEL IN BUSHING	1
	F27-10		后轮毂轴承	BEARING, REAR HUB	2
	F27-11		后轮毂油封	OIL SEAL, REAR HUB	2
	F27-12		后链轮	CHAIN DISC	1
	F27-13		后轮左衬套	L BUSHING, REAR WHEEL	1
	F27-14		后轮右衬套	R BUSHING, REAR WHEEL	1
	F27-15		链条调节器左	CHAIN ADJUSTER L	1
	F27-16		链条调节器右	CHAIN ADJUSTER R	1
	F27-17		后轮轴	REAR AXLE	1
	F27-18		后轮轴螺帽	FRONT AXLE NUT	1
	F27-19		T30 M6*20	INNER BOLT M6*20	6

F28 装饰盖 DECORATIVE COVER

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F28-01		左车架保护罩 (高配)	L FRAME SHIELD (HIGH-GRADE)	1
	F28-02		右车架保护罩 (高配)	R FRAME SHIELD (HIGH-GRADE)	1
	F28-03		左车架保护罩 (标配)	L FRAME SHIELD (STANDARD-GRADE)	1
	F28-04		右车架保护罩 (标配)	R FRAME SHIELD (STANDARD-GRADE)	1
	F28-05		油箱上胶	FUEL UPPER TANK MOUNTING GLUE	1
	F28-06		油箱下胶	FUEL LOWER TANK MOUNTING GLUE	2
	F28-07		扎带	TIE	3
	F28-08		主线线卡	WIRE HARNESSASSY CLIP	1
	F28-09		油门线卡	THROTTLE CABLES CLIP	1
	F28-10		T25不锈钢M5*12	INNER BOLT M5*12 STAINLESS STEEL	5
	F28-11		96 Φ6	WASHER Φ6	4
	F28-12		T40圆头M8*20	INNER BOLT M8*20	2
	F28-13		T30 M6*12	INNER BOLT M6*12	2

F29-1 HJ250H-5 车架 FRAME

	NO	PART CODE	CHINESE DESCRIPTION	ENGLISH DESCRIPTION	QTY
	F29-1-01	TSE 250R	车架	FRAME	1
	F29-1-02	TSE 250R	发动机上悬挂左	L UPPER SUSPENSION PLATE, ENGINE	1
	F29-1-03	TSE 250R	发动机上悬挂右	R UPPER SUSPENSION PLATE, ENGINE	1
	F29-1-04	TSE 250R	发动机后尾盖	COVE CHAIN CASE	1
	F29-1-05	TSE 250R	发动机压线板	LINE CARD	1
	F29-1-06	TSE 250R	平叉内衬套	REAR FORK IN BUSHING	2
	F29-1-07	TSE 250R	5787 10*120	BOLT 10*120	1
	F29-1-08	TSE 250R	5787 8*75	BOLT 8*75	1
	F29-1-09	TSE 250R	5787 8*60	BOLT 8*60	2
	F29-1-10	TSE 250R	5787 8*45	BOLT 8*45	1
	F29-1-11	TSE 250R	96 Φ6	WASHER Φ6	1
	F29-1-12	TSE 250R	翻边衬套Φ6*Φ18*10	T BUSHING Φ6*Φ18*10	1
	F29-1-13	TSE 250R	5787 6*12	BOLT 6*12	2
	F29-1-14	TSE 250R	5787 6*10	BOLT 6*10	3
	F29-1-15	TSE 250R	衬套	BUSHING	1
	F29-1-16	TSE 250R	自锁螺帽 M10	NUT M10	1
	F29-1-17	TSE 250R	6177 M8	NUT M8	4
	F29-1-18	TSE 250R	6187 M10	NUT M10	1



